



**Avery Weigh-Tronix**

SCALES FOR AGRIBUSINESS

## Model 1040/XL Indicator



## User Instructions

#### **UNITED STATES**

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference in which case the user will be required to correct the interference at his own expense.

#### **CANADA**

This digital apparatus does not exceed the Class A limits for radio noise emissions from digital apparatus set out in the Radio Interference Regulations of the Canadian Department of Communications.

Le present appareil numerique n'emet pas de bruits radioelectriques depassant les limites applicables aux appareils numeriques de la Class A prescrites dans le Reglement sur le brouillage radioelectrique que edicte par le ministere des Communications du Canada.



#### **CAUTION**

**Risk of electrical shock. Do not remove cover. No user serviceable parts inside. Refer servicing to qualified service personnel.**

**Weigh-Tronix reserves the right to change specifications at any time.**

# Table of Contents

Table of Contents .....	3
Specifications .....	5
Introduction .....	7
About This Manual .....	7
The 1040 Indicator .....	7
Key Descriptions .....	8
Annunciators .....	8
Display Messages .....	9
Entering Alphanumeric Characters .....	10
Getting Started .....	11
Mounting the Model 1040 .....	11
Cable Connections and Power Requirements .....	12
Weighing Procedures .....	15
Simple Weighing .....	15
Loading/Unloading Ingredients Into A Mixer .....	15
Loading or Unloading Ingredients By Using the XM64 .....	16
Operational Overview .....	17
Menus .....	17
Gross Mode and Power Failures .....	17
Data Entry .....	17
User Menu .....	18
LIST .....	18
CLR.ACC .....	19
BAT.CNT .....	20
ING.TOL & DELAY .....	20
TIMER .....	22
ENTRY .....	22
TIME .....	25
DATE .....	25
VOLUME .....	26
SLEEP .....	26
NATION .....	26
CLR.DAT .....	27
Recipes and Pens .....	28
Recipe Features .....	28
Choose a Recipe Entry Mode .....	28
Recipe Menu .....	29
Creating a Recipe .....	29
Editing Operations .....	31
Pens .....	32
Using ID .....	33

Other Operations .....	34
Manual Hold Mode .....	34
Batching Recipe (Ingredient Loading Method) .....	34
Mix Timer Operation .....	36
Pen Unloading .....	37
Viewing the Accumulators .....	39
The XM64 Transmitter/Receiver .....	42
Printing .....	42
Indicator Diagnostics .....	47
Access the Test Menu .....	47
RD64/XL/M Remote Displays and XM64 Remote Transmitter .....	51
XM64 Remote Transmitter/Receiver .....	51
Troubleshooting .....	52
Power On .....	52
Indicator Over/Under Capacity .....	53
Inaccurate Weight Readings .....	53
Measuring Supply Battery Voltage .....	54
Service Repairs .....	54
Windows Setup .....	55
To Download .....	56
Transfer Data Module (TDM-40) .....	56

# Specifications

Power Input:	10 to 18 volts, DC negative ground 400ma at 8 350 weigh-bar load
Display:	1.1 inch (Model 1040) 2.0 inch LCD (Model 1040XL), 6 Digits, 14 segment alpha-numeric, fiber optic backlight
Display Rate:	1, 2, or 5 times per second
Enclosure:	Water/dust resistant, structural polycarbonate, 8.50" high x 10.5" wide x 6.0" deep IP65 Water resistant
Capacity Range:	Up to 200,000 lb/kg
Increment sizes:	.01, .02, .05, .1, .2, .5, 1, 2, 5, 10, 20, 50, 100, 200 lb/kg
Accuracy:	+/- 0.1 % of applied load +/- 1 division
Internal A/D resolution:	1,000,000 counts
Operational keys:	0-9 with alpha capabilities, Load/Unload, Gross, Recipe, Usage, Hold, Menu, Print, Id, Select, Timer, and Zero Clear
Annunciators;	Auto, Pen, Load, Gross, Recipe, Ingredient, Alarm, Usage, Motion, Hand-Add, Lb, and Kg. (12 annunciators)
Audio Output:	Audio tone feedback for key contact assurance
Weigh-bar Drive:	10 350 ohm weigh-bars
Serial Ports:	2 RS-232 serial ports programmable for different selectable output formats (Std, TDM, Broadcast)
Lower Assembly:	Connectors for the following: Power, Com1, Com 2, Weigh-bar J-box, Alarm Output, RD64  Optional Connectors: Speed Sensor Input  There will be seven standard different lower base assemblies: 1. W/T standard 7 pin 5 conn (pwr/alm/RD64/Com1/j-box) 2. W/T std 7 pin w/options 7 conn (pwr/alm/speed/RD64/Com1/Com2/j-box) 3. Single conn (AMP) 5 conn (pwr/alm/RD64/Com1/j-box) 4. Single conn (AMP w/options) 7 conn (pwr/alm/speed/RD64/Com1/Com2/j-box) 5. *W/T 4 x 5pin w/ Com 1 and RD64 output 8 con (pwr/alm/RD64/Com1/4-5 pin conn) 6. *W/T 3 x 5pin w/dual RS-232 and RD64 output 7 conn (pwr/alm/RD64/Com1/3-5 pin conn) 7. *W/T 4 x 4pin w/dual RS-232 and RD64 output 8 conn (pwr/alm/RD64/Com1/4-4pin conn) *NOTE: These versions do not offer Speed Sensor input or com 2.

Two TTL Inputs: Two programmable inputs (Std, Zero Clear, Menu, Hold, Print)

Options: 1.1 inch LCD Display Option  
TDM-40 Transfer Module/ with TDS-1040 or TDS-40 software packages  
RD64 Remote Display  
RD64XL Remote Display  
RD125RF Remote Display  
XM64 Transmitter/receiver set  
Speed Sensor switch assembly

Operating Temperature: -40° to 140° F (-40° to 60° C)

Weight: 10 lb/ 4.5 kg

Agencies: FCC Class A  
CE (European Approval)

Warranty: Three Year

# Introduction


## About This Manual

This manual covers the information you need to operate your Weigh-Tronix batching Model 1040/XL indicator.


Major sections of this manual are headed by titles in a black bar like *Introduction* above. Subheadings appear in the left column. Instructions and text appear on the right side of the page. Occasionally notes, tips, and special instructions appear in the left column.

## The 1040 Indicator

The 1040 indicator face is shown in Figure 1. The 1040XL is shown in Figure 2. The Model 1040XL and the Model 1040 have the exact same software. The only difference is the display size.

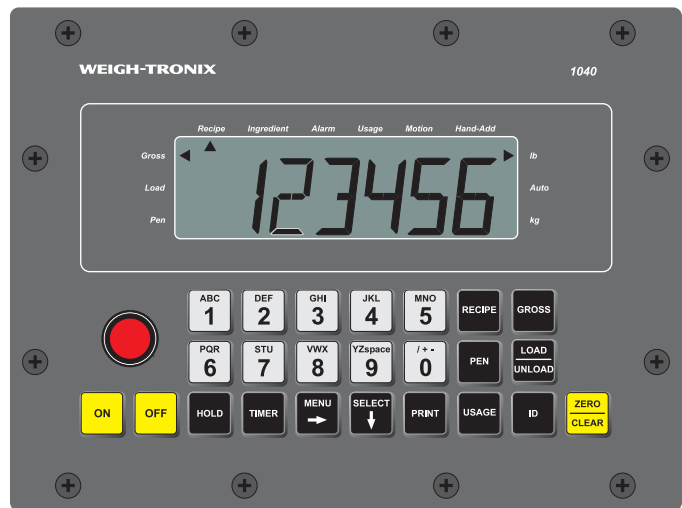

**Figure 1**  
1040 Indicator face

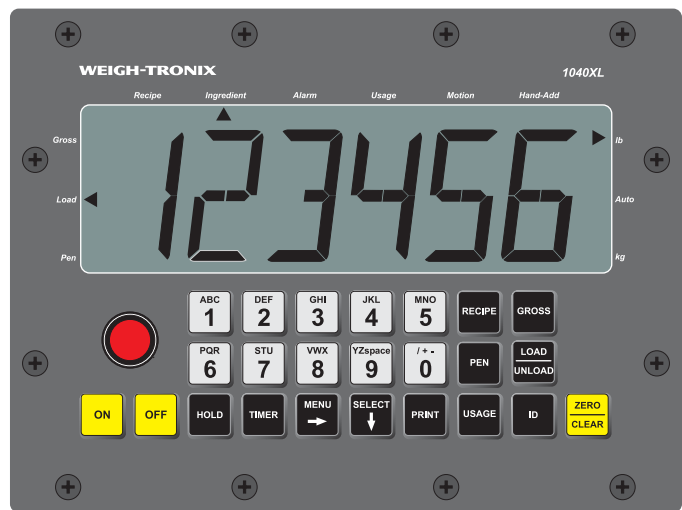

**Figure 2**  
1040XL Indicator face

## Key Descriptions

There are 24 keys. All keys except the **ON** and **OFF** have audible feedback; low, medium, high.

Key	Description
<b>ON</b>	Press to turn the unit on.
<b>OFF</b>	Press to turn the unit off.
<b>1-9, A-Z</b>	Press to enter in numeric data. In specific modes, use this to enter ingredient, recipe or pen alphanumeric names.
<b>ZERO/CLEAR</b>	Press to zero the indicator, clear the data entry display, delete recipes, ingredient names and pen names.
<b>RECIPE</b>	Press to access recipe programming mode, and/or used to batch a recipe.
<b>PEN</b>	Press to access pen programming mode, and pens.
<b>GROSS</b>	Press to access the gross live weight mode.
<b>LOAD/UNLOAD</b>	Press to access the net loading/unloading mode, or use to get into the loading or unloading process.
<b>USAGE</b>	Press to access the ingredient, recipe, and pen batch accumulators.
<b>ID</b>	Press to enter in a user ID number.
<b>HOLD</b>	Press to access the HOLD mode. This mode allows the weight to hold at its weight until released from this mode.
<b>TIMER</b>	Press to access the timer mode. Either time or rotations timer.
<b>MENU</b>	Press to move around in the appropriate menu structure.
<b>SELECT</b>	Press to move down in the appropriate menu structure. Use also to select the quick print.
<b>PRINT .</b>	Press to transfer data to the serial port and transfer to a printer, computer, or handheld data collection device. Or use to enter decimal point in data entry mode.

## Annunciators

The Model 1040 has 12 triangle annunciators along the edge of the display.

PEN	To indicate unit is in the pen unloading mode, pen programming/editing, or viewing the pen accumulators.
LOAD	To indicate unit is in the loading/unloading mode when using the <b>LOAD/UNLOAD</b> key, or the recipe loading mode.
GROSS	To indicate unit is in the gross weighing mode.

RECIPE	To indicate unit is in the recipe mode, either batching or programming. Or, you are viewing recipe accumulators.
INGREDIENT	To indicate unit is in the recipe entry mode, or ingredient entry, or ingredient accumulators.
ALARM	This is on when the user has activated the load/unload or recipe modes that have made the alarm setpoint active and ready to activate the alarm light when the proper weight is reached.
USAGE	To indicate that the usage mode is activated, whether ingredient, recipe, or pens, then those annunciators will be activated as appropriate.
MOTION	Turns on when there is motion present, based on the stability window parameters.
HAND-ADD	Appears when editing ingredients and enabling the ingredient as a hand-add. Then, later when the recipe is recalled, the appropriate ingredient again will turn on if it is a hand-add.
Lb	Turns on if the indicator is programmed for weighing in lb.
AUTO	Turns on if the unit is programmed for AUTO ingredient advance. (or anytime a tolerance and advance delay have been entered).
Kg	Turns on if the indicator is programmed for weighing in kg.

## **Display Messages**

<b>M1040</b>	Message displayed on power up initialization sequence.
<b>HELLO</b>	Message displayed on power-up sequence for 3 seconds
<b>ADJ.AMT</b>	Indicator configured for self-adjusting mode
<b>HD.CT</b>	Indicator configured for head count mode.
<b>WT.AMT</b>	Indicator configured for standard weight ingredient entry mode.
( ^ ^ ^ ^ ^ )	Upper dashes show the indicator is in a state of overcapacity, or analog input is too high.
( - - - - - )	Lower dashes show the indicator is in a state of undercapacity, or analog input is too low.
<b>PRINT</b>	Indicator is transmitting data. Appears after you press the <b>PRINT</b> key for a second.
<b>PR-X</b>	Indicator is showing appropriate quick print, (PR-1 to PR-9) Shows on the display when the proper quick print has been selected.
<b>PRINT.X</b>	Shows on the display when the Print key was pressed after a quick print was selected for printing.
<b>LOW.BAT</b>	Alternates on the display between current mode and <b>LOW.BAT</b> when input voltage is between 8-10 volts.

<b>HOLD</b>	Used when hold mode is activated.
<b>CAN'T</b>	Usually displayed when trying to enter an invalid data. (EX: entering in 9999 for a time)
<b>NOPRGM</b>	Indicates accessed recipe is not programmed.
<b>bAdKEY</b>	This indicates that one of the 22 active keys is on, or one of the two inputs is stuck in the active state. Helpful in debugging a bad keypad or faulty input (transmitter). This remains displayed until the keypad condition is fixed.
<b>SHT.DWN</b>	Is shown on the display prior to shutting the indicator off after the sleep timer has expired, or if voltage exceeds 17 or if voltage is less than 9 for more than 10 seconds. (10 seconds before this the alarm beeps several times).
<b>HI VOLT</b>	Indicates input voltage to Model 1040 has exceeded 17 volts.
<b>OVR.TOL</b>	Displayed when in the load/unload mode or recipe batching mode when a target is over tolerance. If after over-tolerance meets the delay time and motion ceases it will auto advance. Otherwise user will need to advance forward by using the <b>MENU</b> key.

## Entering Alphanumeric Characters

*If two consecutive alpha characters are on the same key, you must wait a second or two after the first character is entered before you can enter the second.*

There are times you will want to enter alphanumeric characters into the 1040. For example: Recipe, ingredient or pen names.

You can enter these characters through the front panel keys. Below is an example to illustrate how it is done.

To key in the word CORN:

1. When the display will accept characters press the **1(ABC)** key repeatedly until the **C** is displayed.
2. Repeatedly press the **5(MNO)** key until **O** appears.
3. Repeatedly press the **6(PQR)** key until **R** appears.
4. Repeatedly press the **5(MNO)** key until **N** appears.
5. Press the **SELECT** key to accept the ingredient name or press the **ZERO/CLEAR** key to clear the name and try steps 1-4 again.

# Getting Started

Before using your new Model 1040 indicator:

- please verify that everything has been properly connected. See Figures 3-6
- If you are mounting the indicator, see the next section: *Mounting the Model 1040*.
- check the scale system to ensure proper units are set (lb, kg)
- verify the system is weighing properly.

---

## Mounting the Model 1040

---

The Model 1040 mounts on a quick-detach bracket. Weld or bolt the quick-detach bracket into place, as follows:

1. Choose a mounting location that is
  - convenient for operation of the indicator, and
  - protected from moving parts or from other moving machinery.
2. Hold the indicator at the proposed mounting location, and verify that the display is legible and the controls accessible.
3. Positioning the quick-detach bracket with the wider end at the top, mark the desired mounting location. If bolting, use the quick-detach bracket as a template and mark and drill holes.
4. Weld or bolt the quick-detach bracket at the appropriate location. If bolting, use double nuts or self-locking nuts to protect both indicator and machinery.
5. Insert the indicator bracket into the quick-detach bracket and push it down into place.
6. For mobile applications, wrap and twist a strong wire around the indicator bracket and the quick-detach bracket to stabilize the mounting.


# Cable Connections and Power Requirements

Make sure all cables are connected as shown in Figures 3-6.

Voltage to the Model 1040 must be 10-17 volts DC, negative ground only. If voltage is between 9-10 volts, *LOW.BAT* is displayed on the indicator. Dropping below nine volts will cause the Model 1040 to automatically shut itself off, protecting the battery from being completely drained.


If voltage is above 17 volts, *HI VOLT* flashes on the the display. After ten seconds the unit displays *SHT.DWN* and turns off.

If voltage is below nine volts, *LOW.BAT* flashes on the the display. After ten seconds the unit displays *SHT.DWN* and turns off.

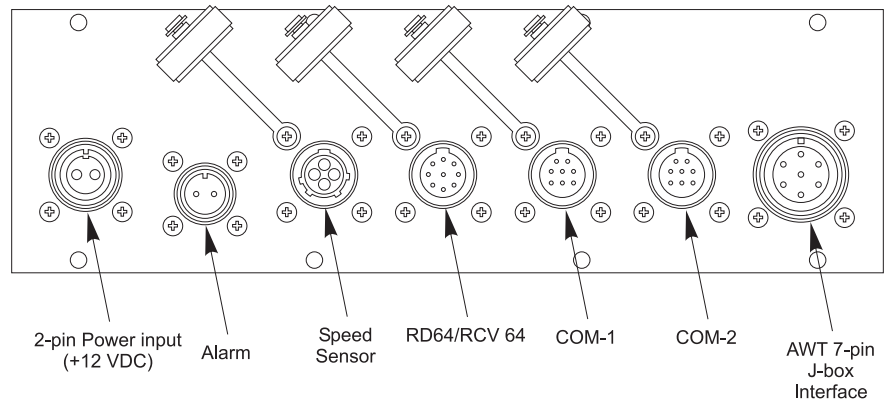


**Figure 3**

Bottom panel w/power, alarm, speed sensor, remote display, 2 Com ports, and 7-pin J-box connections

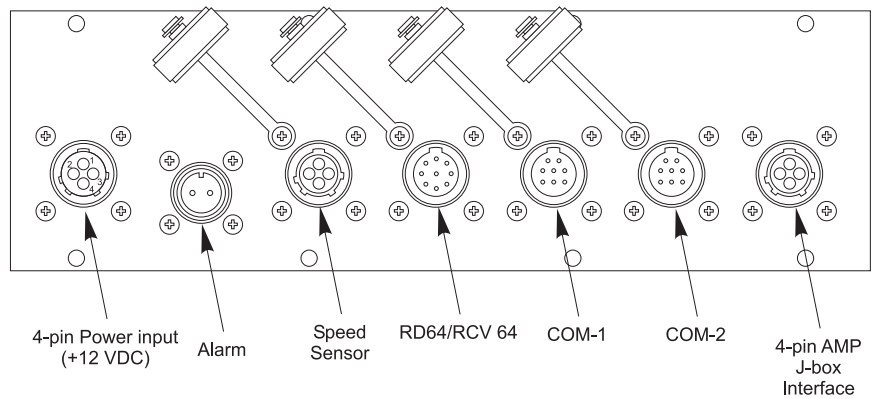


**Figure 4**

Bottom panel w/power, alarm, speed sensor, remote display, 2 Com ports, and 4-pin J-box connections

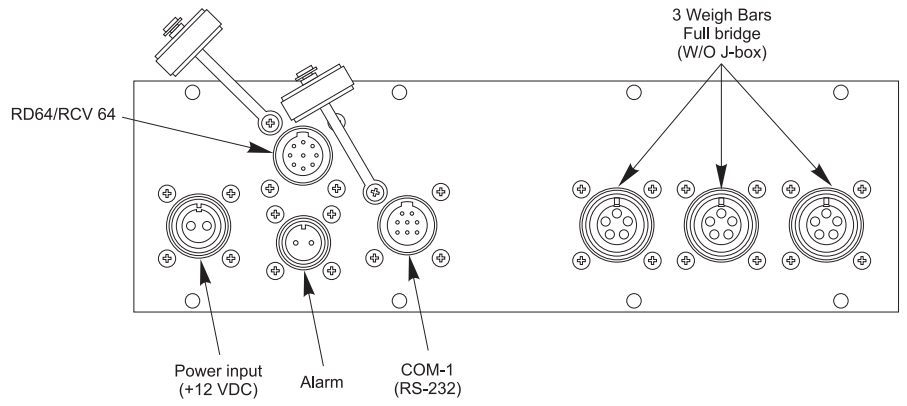


**Figure 5**  
 Bottom panel w/power, alarm, remote display, 1 Com port, and 3 Weigh Bar connections

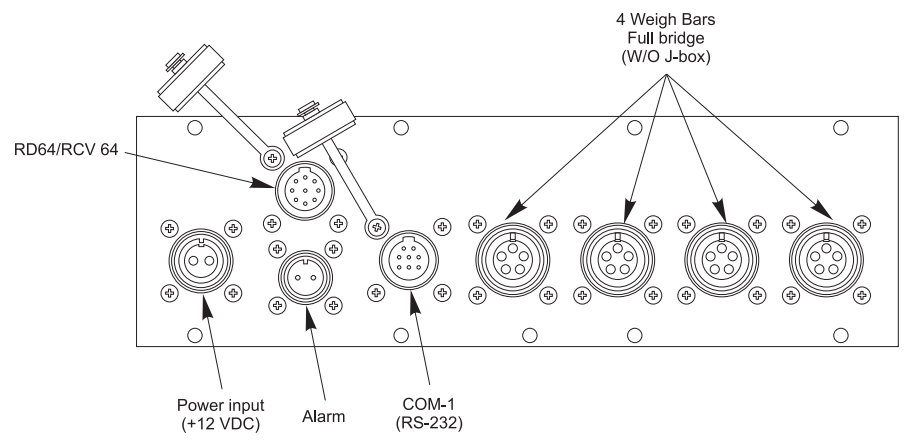


**Figure 6**  
 Bottom panel w/power, alarm, remote display, 1 Com port, and 4 Weigh Bar connections

### Speed Sensor Input

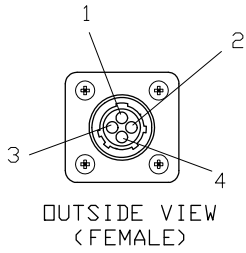


Pin	Description
1	+ 12V
2	GND
3	Input
4	N/C

### RS-232 Port

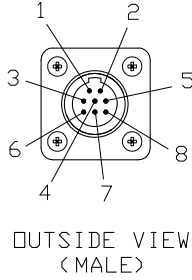


Pin	Description
1	CTS
2	XMT
3	RTS
4	RXD
5	GND
6	GND
7	+5V
8	+12V

### 4-Pin Power Input

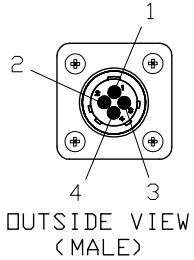


Pin	Description
1	+12V Input
2	GND
3	N/C
4	N/C

### 4-Pin Amp J-Box Interface

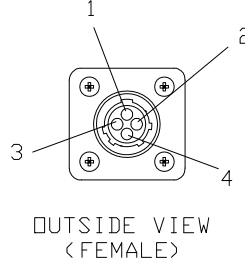


Pin	Description
1	+ Excitation
2	- Bridge
3	+ Bridge
4	-Excitation

### 2-Pin Power Input

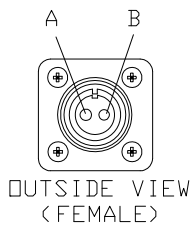


Pin	Description
A	+12V
B	GND

### 7-Pin J-box Interface

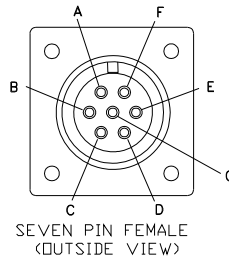


Pin	Description
A	- Bridge
B	+ Excitation
C	+ Bridge
D	- Excitation
E	- Sense
F	+ Sense
G	Shield

### 2-Pin Alarm Input

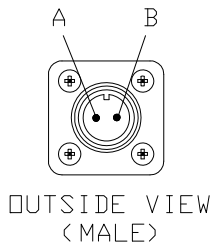


Pin	Description
A	+12V Alarm
B	GND

### 5-Pin Weigh Bar Input

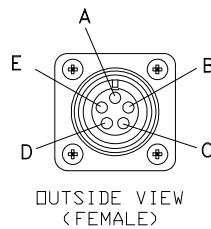


Pin	Description
A	- Bridge
B	+ Excitation
C	+ Bridge
D	- Excitation
E	Shield

### RD64/XL/M Input

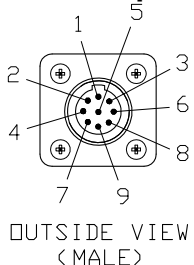

Pin	Description
1	+12V
2	+5V
3	Pwr Ret
4	GND
5	Seg Test
6	Data In
7	Clock
8	Load
9	Remote

### 4-Pin Weigh Bar Input

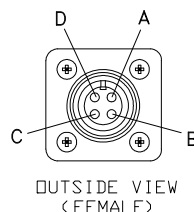

Pin	Description
A	GND
B	NA
C	NA
D	NA

# Weighing Procedures

## Simple Weighing

1. Press the **ON** key. . .

Display shows **M 1040** then **HELLO**, then weight value is displayed in the Gross mode. If it shows **RETURN**, press **SELECT** to resume batching process, otherwise **GROSS** to return to Gross mode.

2. Press the **GROSS** key. . .

Live scale weight is displayed in the gross weighing mode.

3. Press the **ZERO/CLEAR** key. . .

Zero value is displayed, and the system is zeroed.

Press **PRINT** to print the displayed weight value. Below is an example of a printout:



10000 lb

## Loading/Unloading Ingredients Into A Mixer

*If you miskey, simply press **ZERO/CLEAR** and re-enter the proper amount.*

1. Zero the indicator before loading first Ingredient.

2. Key in the target weight of the first ingredient. . .

Quantity to load/unload is displayed.

3. Press the **LOAD/UNLOAD** key. . .

Target weight remains displayed, and the load and alarm annunciator turns on. (this sequence now has the alarm setpoint engaged)

4. Start loading/unloading the first ingredient. . .

Display shows the net amount of what needs to be loaded/unloaded, decreasing from target amount towards zero. (It doesn't matter if you are loading or unloading)

When displayed weight approaches within 50 lb/kg (default) of your selected target weight, the alarm light starts flashing once/sec. When your target is reached the alarm light stays on solid.

5. Stop loading/unloading when target weight is reached.

6. Press the **GROSS** key to shut off the alarm and the display will return to the gross mode. Press **ZERO/CLEAR** to shut off alarm and remain in the Load/Unload mode with the previous target amount active. This is very handy for loading/unloading a series of equal amounts.

7. If **AUTO-HOLD** is enabled. . .

The alarm shuts off and the indicator goes into Auto-Hold mode, displaying **HOLD**

If **AUTO-HOLD** is off. . .

The alarm shuts off, and the unit returns to the gross mode.

8. Move mixer to its next ingredient loading/unloading location. . .

Display shows **HOLD**. Because the unit is in HOLD mode it will not allow the display weight to change because of the terrain. This will prevent a scale zero shift. Press **MENU** (or XM64) or **GROSS** key to return to Gross mode.

## **Loading Or Unloading Ingredients By Using the XM64**

*The alarm light is nonfunctional  
in this loading/unloading  
sequence.*

You can load or unload a series of ingredients or batched feed by using the XM64 transmitter/receiver. You must know the net amount to be loaded or unloaded. The XM64 gives you the ability to tare or zero each ingredient and view the net amount as you load or unload. The remote can also be used to indicate the gross amount between ingredients and can return the indicator to the gross mode when done loading by simply holding down on the XM64 for three or more seconds.

Follow these steps:

1. Be sure the mixer or scale system is empty and zero the indicator.
2. Press the **LOAD/UNLOAD** key. . .

Zero value is shown, and the load and lb/kg annunciators turn on. This means the net weighing mode is on.

3. Load or unload material as needed. . .

Net weight value increases. This is an absolute weight value. If you are loading or unloading it shows the amount loaded or unloaded so far.

4. When you reach the proper amount, stop loading or unloading material.

5. Press the **ZERO/CLEAR** button or the XM64 button. . .

The net value shown is reset or tared back to zero, ready for the next amount.

You may view the gross weight by pressing and holding the XM64 button. If you release the button within three seconds, the unit returns to the net mode showing zero.

If you are done loading and now want to return to the gross mode for unloading, press and hold the XM64 button for more than three seconds.

To return to the net mode, press **LOAD/UNLOAD**.

6. Load or unload additional quantities by repeating steps 3-5 as needed, otherwise, if done loading, press the **GROSS** key to return to gross weighing mode.

# Operational Overview

## Menus

The following is an operational overview of the 1040/XL indicator.

The indicator has the following menus:

- User menu (no password)
- Test menu (111 Menu)
- Setup menu (covered in the *Service Manual*)
- History menu (covered in the *Service Manual*)
- Factory calibration menu (covered in the *Service Manual*)

## Gross Mode and Power Failures

The standard mode of operation is the gross mode. The Gross annunciator will be on and gross weight on the scale will be displayed.

After a power failure, when you power up the indicator you are given the opportunity to return to the step in any process you may have been in when the power failure occurred. This is important if you lose power in the middle of a batch and simply want to return to which ingredient you were loading.

If power is lost during batching of a recipe, the display will show *RETURN* when power is restored. If you want to exit the recipe process, press the **GROSS** key. If you want to return to recipe process, press the **SELECT** key. The indicator will return to where it was when power was lost. If you were in the middle of loading an ingredient and don't remember what ingredient it was, press the **LOAD/UNLOAD** key to see the ingredient name.

## Data Entry

All data entered will become one of the following:

- weight - All weight entered data will be rounded on a standard rounding scheme to the nearest division size. (Example: If you enter 5002, and the indicator is counting by 5's, once the next key is pressed signifying that it is weight, the display will show and record the entry as 5000).
- Time or Rotation entry
- Id
- Quick print number
- Recipe or Pen number
- Recipe entry (If entering a recipe, all data will be allowed down to 1 lb/kg. Rounding will be implemented when actually batching or printing recipes.

Anytime you enter data by mistake, the **ZERO/CLEAR** key will clear the data entry display and you can re-enter the correct data.


# User Menu

Press the **GROSS** key repeatedly to escape from any spot on the menu and return to the Gross mode.

Figure 7 shows the User menu. All the user configurable parameters are set through this menu. This section deals with each of the items in the menu. You will be referred back to Figure 7 several times.

To enter the menu, press and hold the **MENU** key until you hear the unit beep twice (2 seconds). Release the key and the display will show *LIST*.

Use the **SELECT** key to move down from a menu item. Use the **MENU** key to move to the right in the menu. When you are done configuring one of the menu items, press the **GROSS** key to move back up to the menu item.

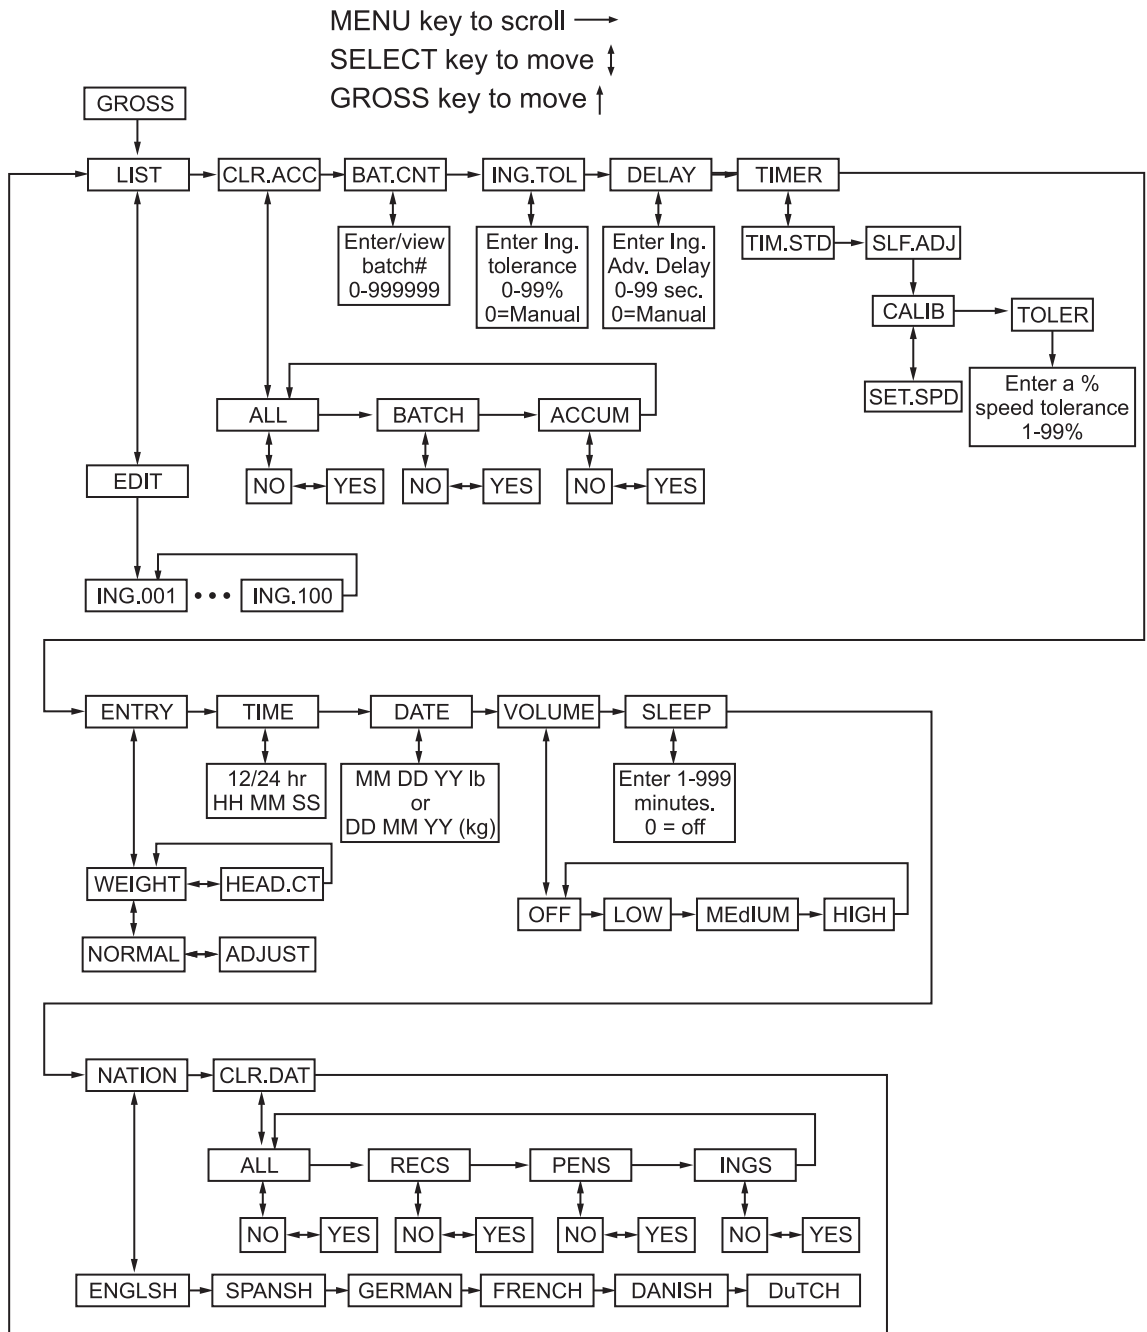

**Figure 7**  
User menu

---

## LIST

---

### **To Set Ingredient Description Back to Default Setting**

If you want to change back to the default description, access the proper ingredient and press and hold the **ZERO/CLEAR** key for 2 beeps and release. **ING.CLR** will be briefly displayed and then returns to **EDIT**.

### **To Setup Ingredient as an Hand-add**

While ingredient name is displayed, press the **HOLD** key and the Hand-add annunciator will illuminate. The ingredient will then always be treated as a hand-add ingredient. Press the **HOLD** key again to disable the tagging of an ingredient as a hand-add ingredient.

The first item in the user menu, Figure 7, is *LIST*. Use this to edit your ingredient list. You can have up to 100 ingredients stored in the 1040. By default the names are ING.001 through ING.100.

Follow steps 1 - 3 to access the

1. From gross weighing mode, press and hold **MENU** for 2 beeps. . .  
*LIST* is displayed.
2. Press **SELECT**. . .  
*EDIT* is displayed.
3. Press **SELECT** to access the first ingredient in the list. . .  
*ING.001* is displayed

OR

Key in the ingredient number you want to edit and press **SELECT**. . .  
That ingredient is displayed.

You can enter alphanumeric titles for each ingredient using the front panel keys. See the section *Entering Alphanumeric Characters* for instructions.

4. Once edited properly, press **SELECT** then **MENU** to access the next ingredient in the list  
OR  
Press the **GROSS** key repeatedly to return to the gross weighing mode.

Once edited, these new ingredient descriptions will show up on all applicable printouts and in the batching process.

---

## CLR.ACC

---

The next menu item is CLR.ACC. Under this item you can choose to clear:

- ALL accumulators (the last 100 batch printouts/data and all ingredient, recipe and pen accumulators)
- BATCH accumulator ((the last 100 batch printouts/data)
- ACCUM (the ingredient, recipe and pen accumulators).

Follow these steps:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key once. . .  
*CLR.ACC* is displayed
3. Press the **SELECT** key. . .  
*ALL* is displayed.
4. Use the **MENU** key to move through the choices. Display the one you want to clear and press **SELECT** key. . .  
*NO* is displayed.

5. Press **MENU** and *YES* is shown. Press **SELECT** key. . .  
*WAIT* is displayed while clearing, then *ALL*, *BATCH*, or *ACCUM* is displayed.
6. Press **GROSS** key. . .  
Unit returns to *CLR.ACC*.
7. Press the **GROSS** key to return to the gross weighing mode, or press the **MENU** key to move to the next menu item.

---

## BAT.CNT

---

The next menu item is *BAT.CNT*. This stands for Batch Counter. The counter starts at 0 and increments each time a recipe is batched. This value is cleared each time the batched data is cleared under *CLR.ACC*. This counter goes up to 999999.

Follow these steps:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until. . .  
*bAT.CNT* is displayed.
3. Press the **SELECT** key. . .  
Current batch counter is shown.
4. Press the **SELECT** key. . .  
*bAT.CNT* is shown
5. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

## ING.TOL & DELAY

---

*ING.TOL* stands for Ingredient Tolerance. *DELAY* stands for ingredient advance Delay. These two parameters work together to make the Auto-advance feature work. Set ingredient tolerance as a percentage (1-99) and delay in seconds. See example below to help understand these items.

Example: Delay parameter is set to 20 seconds  
Tolerance is set to 5%

When the ingredient weight being loaded falls within the tolerance and stays within the tolerance for the time set in the delay parameter, the indicator will auto-advance to the next ingredient.

If you undershoot the ingredient tolerance, you can advance the ingredient manually by pressing the **MENU** key on the 1040. If you overshoot, the display will alternate between *OVR.TOL* and the amount overloaded until the indicator doesn't sense motion, then it will advance to the next ingredient.

Follow these steps to set or view the *ING.TOL* parameter:

Auto-advance will take place **only** if an ingredient tolerance and an advanced delay parameter have values set at other than 0. If either parameter is set to 0, there will be no auto-advance.

The default setting is 0 for both parameters. This means auto-advance is **disabled**.

If an XM64 transmitter/receiver is installed into the 1040, press the XM64 button to advance to the next ingredient. **Do not use auto-advance if the 1040 system has the XM64 option.**

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until. . .  
*ING.TOL* is displayed
3. Press the **SELECT** key. . .  
Current tolerance setting is displayed.
4. Use the keypad to enter in the new tolerance. . .  
Entered tolerance value is displayed
5. Press the **SELECT** key. . .  
*ING.TOL* is displayed
6. Press the **MENU** key to move to the *DELAY* menu item.

To set or view the *DELAY* parameter:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until. . .  
*dELAY* is shown
3. Press the **SELECT** key. . .  
Current delay parameter is shown
4. Use the keypad to enter in the new setting. . .  
Entered value is displayed.
5. Press the **SELECT** key and. . .  
*dELAY* is shown
6. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

## TIMER

---

(Default setting = *TIM.STD*)

This parameter sets the timer mode for standard time or self-adjusting time. The self-adjust feature requires the mixer to be fitted with a proximity sensor to sense the speed of the mixer. Consult nearest distributor.

To set the timer mode:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until *TIMER* is shown
3. Press the **SELECT** key . . .  
*TIM.STD* or *SLF.ADJ* is shown

4. Press the **MENU** key toggle between the choices.
5. Press **SELECT** when your choice is displayed. . .  
 If you select *TIM.STD*, *TIMER* is displayed.  
 If you select *SLF.ADJ*, *CALIB* is displayed. Use this to calibrate the desired mixing speed. Press **SELECT** to enter calibration mode.  
  
*SET.SPD* is shown. Make sure the mixer is at the target speed and press **SELECT**. The display will show *SPD.CAL* until there is enough data to calibrate. The display will show *CALIB* when done.

Press the **MENU** key. . .

*TOLER* is displayed. Use this to set up the speed tolerance.

Press **SELECT**. . .

Enter the tolerance (1-99%)

Press **SELECT**. . .

Display shows *TOLER*.

6. Press the **GROSS** key repeatedly to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

## ENTRY

*When a recipe is programmed, it remembers the mode the indicator was in at the time of recipe creation. This means you can have some recipes based on head counts and some based on weight.*

**IMPORTANT:** *Make sure the indicator is configured properly before entering recipes.*

*ENTRY* stands for the recipe entry mode. The indicator can accept recipes in several ways. Below are explanations for each mode and examples to illustrate. See note at left.

### 1. *WEIGHT>NORMAL* mode

This is used for entering batches based on weight or by percentage if adding up to 100, 1000 or 10000.

### 2. *WEIGHT>ADJUST* mode

This is based on weight or by percentage, same as #1 above. The difference is that after the first ingredient is loaded, the rest of the ingredients will be adjusted accordingly depending on how far off the first ingredient was from the target. This maintains a proper ration balance.

### 3. *HEAD.CT* mode

This mode is based on entering recipes with weight amounts to feed 100 head.

**Example 1:** Entering a recipe by net weight (*WEIGHT>NORMAL* mode or *WEIGHT>ADJUST* mode)

Use this method when you have a recipe set up by weight for each ingredient such as:

4000 lb batch size  
 Ingredient 1 = 1000 lb corn  
 Ingredient 2 = 1230 lb hay  
 Ingredient 3 = 1450 lb silage  
 Ingredient 4 = 320 lb alfafa  
 total = 4000 lb

When this recipe is selected in the future, you can enter the batch size you want and all ingredient amounts will be proportioned automatically.

**Example 2:** Entering a recipe by ingredient percentages  
 (*WEIGHT>NORMAL* mode or *WEIGHT>ADJUST* mode)

Use this method when you have a recipe set up by ingredient percentages of a batch that adds up to 100, 1000, or 10000.

Enter the recipe by entering the percent of each individual ingredient of the total batch so the total equals 100. Same example as above would now be:

1. 2500 (represents 25.00% of corn)
2. 3075 (represents 30.75 % of hay)
3. 3625 (represents 36.25% of molass)
4. 800 (represents 8.00% of silage)
- t 10000 (total % of all programmed ingredients)

(Depending on how many digits are entered ex; 25.03 % can be entered as 25, 250, or 2503 depending on accuracy. You must make total add up to 100, 1000, or 10000.)

**Example 3:** Entering a recipe based on head count of animals (*HEAD.CT MODE*). See note at left.

Use this when you want to mix a batch according to how many animals can be fed. When you enter the recipe, the total weight must add up to amount needed to feed 100 animals. When you start a batch, type in the number of animals and the total batch amount of the recipe will be automatically calculated.

*Head count is limited to 999 head.*

To setup for standard weight mode (*ENTRY>WEIGHT>NORMAL*):

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press **MENU** repeatedly until *ENTRY* is displayed.
3. Press **SELECT**. . .  
*WEIGHT* or *HEAD.Ct* is displayed.
4. Press **MENU** repeatedly until. . .  
*WEIGHT* is displayed
5. Press **SELECT**. . .  
*NORMAL* or *ADJUST* is displayed.

6. Press **MENU** until *NORMAL* is displayed
7. Press **SELECT**. . .  
*WEIGHT* is shown.
8. Press **GROSS** key. . .  
*ENTRY* is shown.
9. Press the **GROSS** key to return to the Gross weighing mode or press **MENU** key to move to next menu item.

To setup for standard weight mode with auto-adjust (*ENTRY>WEIGHT>ADJUST*):

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press **MENU** repeatedly until *ENTRY* is displayed.
3. Press **SELECT**. . .  
*WEIGHT* or *HEAD.Ct* is displayed.
4. Press **MENU** repeatedly until *WEIGHT* is displayed.
5. Press **SELECT**. . .  
*NORMAL* or *ADJUST* is displayed.
6. Press **MENU** until *ADJUST* is displayed.
7. Press **SELECT** and *WEIGHT* is displayed.
8. Press **GROSS** key. . .  
*ENTRY* is shown.
9. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

To setup for head count (*ENTRY>HEAD.CT*):

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press **MENU** repeatedly until *ENTRY* is displayed.
3. Press **SELECT**. . .  
*WEIGHT* or *HEAD.Ct* is displayed.
4. Press **MENU** repeatedly until *HEAD.CT* is displayed.
5. Press **SELECT**. . .  
*ENTRY* is displayed.
6. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

---

## TIME

The Model 1040 has battery backed time and date features. Printouts can be configured for 24 hour or 12 hour styles but time must always be entered as 24 hr style. Follow these steps:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until *TIME* is displayed.
3. Press **SELECT**. . .  
Current time is shown.
4. To change time enter HHMMSS and press **SELECT**. . .  
*TIME* is displayed  
  
To leave time as it is, press **SELECT**. . .  
*TIME* is displayed
5. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

---

## DATE

The indicator has battery backed time and date standard. The date can be viewed or entered by following these steps:

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until *DATE* is displayed.
3. Press **SELECT**. . .  
If pounds is the current unit of measure, *MMddYY* is displayed momentarily, then the current date is displayed in *MMddYY* format.  
  
or  
  
If kg is the current unit of measure, *ddMMYY* is displayed momentarily, the the current date in *ddMMYY* format
4. To change the date, enter *MMddYY* if in lbs or enter *ddMMYY* if in kgs and press **SELECT**. . .  
*DATE* is displayed  
  
To leave time as it is, press **SELECT**. . .  
*DATE* is displayed
5. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

## VOLUME

---

(Default = high)

The Model 1040 has audible feedback on key presses that can be configured for OFF, low, medium, and high volume.

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until *VOLUME* is displayed.
3. Press the **SELECT** key. . .  
Current setting is shown
4. Press **MENU** repeatedly to scroll through choices. When your choice is displayed, press **SELECT**. . .  
*VOLUME* is displayed
5. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

## SLEEP

---

(Default = 0, for off)

*When the unit goes to sleep, the unit will first activate the audible alarm, and user has 10 seconds to press a key to reset the SLEEP timer. If a key hasn't been pressed within these 10 seconds the display shows SHTDWN, and the unit shuts off.*

The Model 1040 has a sleep mode that will shut the unit off if no keys are pressed or the weight doesn't change by more than 1% over the number of minutes that you enter for the sleep setting.

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** key repeatedly until *SLEEP* is displayed.
3. Press the **SELECT** key. . .  
Current setting is displayed
4. Use the keypad and enter in the sleep shutoff setting from 0-999 minutes. . .  
Entered value is displayed.
5. Press the **SELECT** key. . .  
*SLEEP* is displayed. If an invalid entry is attempted, *CAN'T* will be displayed, and the user will need to enter a valid entry from 0-999.
6. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

---

## NATION

---

The Model 1040 allows you to select a language for the display messages that are spelled on the display, and for all the printouts that are available. Choose from English, Spanish, German, French, Danish, and Dutch.

1. From the Gross mode, press and hold the **MENU** Key for two beeps (2 sec), then release...  
*LIST* is displayed
2. Press the **MENU** key several times until....  
*NATION* is displayed

3. Press the **SELECT** key...  
Current setting is displayed.
4. Use the **MENU** keys and scroll to the proper language selection...  
Proper selection is shown.
5. Press the **SELECT** key...  
*NATION* is displayed.
6. Press the **GROSS** key...  
Returns to the gross mode.

---

## CLR.DAT

---

Used to clear all recipes programmed, all pens programmed, and all ingredient names.

1. From the Gross mode, press and hold the **MENU** key for two beeps (2 sec), then release. . .  
*LIST* is displayed.
2. Press the **MENU** repeatedly until *CLR.DAT* is displayed.
3. Press the **SELECT** key. . .  
*ALL* is displayed.
4. Use the **MENU** key to scroll through the choices of data you want to permanently clear from memory. Choices are:
 

<i>ALL</i>	All data is cleared.
<i>RECS</i>	All recipes are cleared.
<i>PENS</i>	All pen data is cleared.
<i>INGS</i>	All ingredients are cleared.
5. Press the **SELECT** key when your choice is displayed. . .  
*NO* is displayed.
6. Press **MENU** and *YES* is shown. Press **SELECT** key. . .  
*WAIT* is displayed while clearing, then display shows *ALL*, *RECS*, *PENS* or *INGS*.
7. Press the **GROSS** key to return to *CLR.DAT*.
8. Press the **GROSS** key to return to the Gross weighing mode or press the **MENU** key to move to the next menu item.

This completes the User menu description.

# Recipes and Pens

The 1040 can be programmed with 100 batching recipes. It can also track the unloading of a batched load into 100 pens. Recipes and pens can be custom named for ease of record keeping. This section covers the things you need to know about recipes and using the pen features.

## Recipe Features

Each recipe can draw from a list of 100 ingredients. All ingredients and recipes can be labeled with up to six (6) alphanumeric character.

Recipes have the following features:


1. All recipes are based on weight (net or percentage) or head counts. See the next section for details.
2. All recipes use the programmable pre-alarm warning light. This is configured in the configuration menu. 50 lb/kg is the default value.
3. All recipes can use auto-hold capabilities if enabled in the configuration menu.
4. One recipe can use a maximum of 32 ingredients.
5. Ingredients can be programmed to be hand-adds. This means they are small preweighed items that once loaded into the mixer are recorded as the programmed amounts in the recipe.
6. Recipes can use the auto-mix timer count down feature after the last ingredient has been loaded. This must be enabled in the configuration menu.

## Choose a Recipe Entry Mode

You need to choose the recipe entry mode in the User Menu. Choose Weight (normal or auto-adjust) or Head Count. See the *User Menu* section for information on these choices.

**When a recipe is programmed, the indicator remembers which recipe entry mode the indicator was in at the time of recipe creation. This means you can have some recipes based on head counts and some based on weight, if desired.**

## Recipe Menu

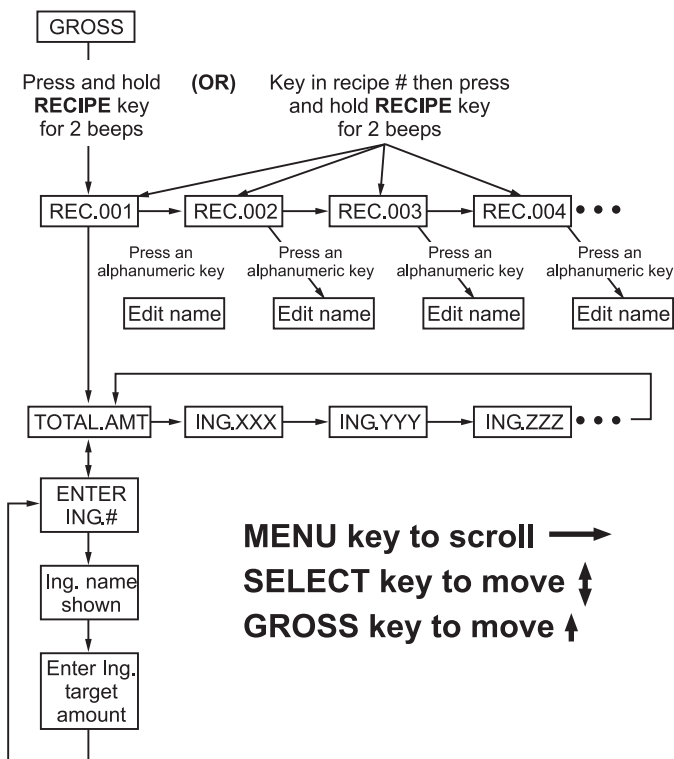

**MENU key to scroll** →  
**SELECT key to move** ⇕  
**GROSS key to move** ↑

**Figure 8**  
**Recipe Menu**

## Creating A Recipe

*100 ingredients standard.  
 ING.001 to ING.100.*

Figure 8 shows the Recipe menu. You can refer to this menu as you go through the process of creating recipes. The Model 1040 allows you to enter 100 recipes. You choose the ingredients for a recipe from the list of ingredients entered under *LIST* in the User menu. Once programmed, any recipe can be quickly recalled for batching operations. **Make sure you have the recipe entry mode set as you wish before beginning. See Choose a Recipe Entry Mode.**

Following are the steps to creating a recipe:

- From the Gross mode there are two ways to get to a recipe. Either key in the number of the recipe you want to program and press and hold the **RECIPE** key for two beeps (two seconds). . .  
*REC.XXX* is displayed. *XXX* being the recipe number you keyed in.  
**OR**  
 Press and hold the **RECIPE** key for two beeps (two seconds). . .  
*REC.001* is displayed. This is the first of 100 recipes ready to be programmed in a new indicator.
- You can change the name of the recipe by using the keypad (See the directions for entering alphanumeric characters found in *Entering Alphanumeric Characters.*) Once completed go to step 3.  
 or  
 you can press **SELECT** to accept the default recipe name and go to step 3..

3. If you are entering a new recipe *T 0* will be displayed. This is where the total weight of ingredients is shown for a recipe.
4. Press the **SELECT** key. . .  
*ING* is displayed.
5. Use the keypad to enter an ingredient number (X) from the LIST (1-100). . .  
X is displayed.
6. Now press **SELECT**. . .  
The ingredient name is shown momentarily. (ex: CORN-1) and then. . .  
  
*AMOUNT* is shown
7. Enter in amount of that ingredient. . .  
Amount entered is shown
8. Now press **SELECT**. . .  
*ING* is displayed
9. Repeat steps 5-7 until all ingredients are entered, then press **SELECT**. . .  
*TXXXXX* is displayed. *XXXXX* is the total amount of ingredients.
10. Press **SELECT**. . .  
*REC.001* (or your custom name) is displayed
11. Press **MENU** to move to the next recipe.  
*REC.002* is displayed (or your custom name)
12. Repeat above steps until all recipes are programmed.. Press **GROSS** to exit from recipe programming mode.

## Editing Operations

Following are instructions for several editing operations you may need to do while maintaining your recipes and ingredient lists.

### Deleting A Recipe

1. From Gross mode, enter the recipe #, then press and hold the **RECIPE** key for 2 beeps (2 sec), then release.
2. Press and hold **ZERO/CLEAR** key for 2 beeps (2 sec). . .  
*REC.CLR* is shown and then the recipe name is shown.
3. Press the **GROSS** key to return to the Gross weighing mode.

### Changing Ingredient Quantities

1. Access the recipe you want to edit, see Figure 8, and use the **SELECT** and **MENU** key to view the ingredient you want changed. Press **SELECT**. . .  
Ingredient amount is displayed.
2. Use the keypad to enter in a new amount then press **SELECT**. . .  
Ingredient is displayed
3. Press the **GROSS** key to return to the Gross weighing mode.

### Deleting Ingredients

Access the recipe you want to edit, see Figure 8, and use the **MENU** and **SELECT** keys to display the ingredient name you want deleted. Press and hold **ZERO/CLEAR** for two beeps ( 2 sec) and release the key.

Ingredient is deleted and next ingredient is shown.

### Inserting Ingredients

Doing an insert will insert the new ingredient in front of the displayed ingredient.

1. Access the recipe you want to edit, see Figure 8, and use the **MENU** and **SELECT** keys to display the ingredient name where you want to insert the new ingredient.
2. Press and hold **SELECT** until *ING* is displayed.
3. Use the keypad to enter in the ingredient number (X) of a valid ingredient from the LIST (1-100). . .  
*X* is displayed.
4. Press **SELECT**. . .  
Ingredient name is shown momentarily (ex: CORN-1) and then *AMOUNT* is shown.
5. Enter in amount of that ingredient. . .  
Amount entered is shown.
6. Press **SELECT**. . .  
Next ingredient in the recipe is shown.
7. Press **GROSS** to return to the gross weighing mode.

## Pens

### Editing Pen Descriptions

*If you enter a number higher than 100, CAN't will be displayed and the display will return to the previous display.*

Pens are used to track the unloading of finished batched recipes. You can store unloading data for up to 100 pens. This data is saved and can be printed. Data saved and printed includes the date, time, pen number, pen description, weight unloaded and total unloaded.

The default names for pens are PEN.001, PEN.002, etc. Follow these steps if you want to customize the name to a six (6) character description.

1. From the Gross mode, enter pen number (example:56), than press and hold on **PEN** key for two beeps (2 sec) then release. . .  
*PEN.056* is displayed.
2. Use the keypad to enter in the description (example: PIG-01). Press the **6(PQR)** key twice to display..  
\_ \_ \_ \_ \_ *P*. See section *Entering Alphanumeric Characters*
3. Press the **3(GHI)** key three times to display. . .  
\_ \_ \_ \_ \_ *PI* is shown.
4. Wait three seconds so the display has time to move the *PI* to the left and the flashing cursor will appear to the right. You need to do this on this keying sequence because *I* and *G* are on the same key. See section *Entering Alphanumeric Characters*.  
Continue keying in characters until *PIG-01* is displayed.
5. Press **SELECT**. . .  
*PIG-01* is displayed, then press **MENU** and *PEN.057*, the next pen, is displayed.
6. Repeat steps 2-5 until all pen names have been properly edited and press **MENU** to scroll through and view all pen descriptions.

To edit the Pen description, display the desired pen and use the keypad to change the description. If you want to change back to the default description simply access the desired pen name and press and hold the **ZERO/CLEAR** key for 2 beeps (2 sec) *PEN.CLR* is displayed and then the next Pen description is shown.

7. Press **GROSS** to return to Gross weighing mode.

---

## Using ID

---

### Entering an ID

*This ID is active on all printouts until it is changed or cleared from the indicator*

### Viewing Current ID

### Clearing Current ID

The Model 1040 has a generic six digit ID that can be used as an operator ID number. This needs to be entered before doing any batching operations so the user is identified. This ID will be printed on the reports or transferred to the TDM-40.

To enter an ID number follow these steps:

1. From the Gross mode, enter the ID #, then press the **ID** key. . .  
ID number is displayed for two seconds, then the display returns to the Gross mode.
1. From the Gross mode press the **ID** key. . .  
Current ID is displayed
2. Press the **GROSS** key to return to the Gross mode.
1. Press the **ID** key. . .  
Current ID is displayed. If no ID exists, display shows *NO ID*, for two seconds and returns to Gross mode)
2. Press the **ZERO/CLEAR** key while the ID is displayed. . .  
*NO ID* is displayed, and returns to the Gross mode.

# Other Operations

This section covers the variety of other operations available with the Model 1040.

## Manual Hold Mode

*When using the hold mode, you must be sure to deactivate hold mode when loading or unloading the mixer.*

Auto holding within the recipe mode was discussed in an *Loading/Unloading Ingredients Into A Mixer*. There is also a manual hold using the **HOLD** key to prevent a zero shift from occurring while moving a portable TMR mixer system over rough farm terrain.

Follow these steps:

1. In the Gross mode ,before moving the mixer system press **HOLD**. . .  
*HOLD* will be displayed
2. Now move the system and when reaching the new loading or unloading point, press either the **HOLD** or **GROSS** key. . .  
Gross weight will be displayed.

## Batching Recipe (Ingredient Loading Method)

*Make sure indicator is set properly to either weight-normal, weigh-adjust, or head count before beginning. Also make sure editing of recipe names has already been done before starting.*

Recipe ingredient loading will provide the following:

- Consistency in the batching operation
- 100 recipe and 100 ingredient capabilities (32 ingredients max/recipe)
- Simplifies the entire batching process
- Track feeder accuracy (ID feature)
- Gives you a low cost record keeping option
- Automatically calculates new ingredient amounts when changing batch size.
- Automatically records feed, recipe, and pen usages, with dates and times.
- Can automatically put the feeder into a mix cycle, (either time or number of rotations)

1. While in the Gross weighing mode, enter the number of the desired recipe, and press **RECIPE**. . .  
Recipe name is displayed.  
  
Either go to step 2 , or use the menu key to scroll to other recipes.

2. Press the **LOAD/UNLOAD** key. . .

The following is displayed

- a. WT.AMT
  - b. ADJ.AMT
  - c. HD.AMT
- or

**NOPRGM (This is displayed if that recipe is not programmed)**

If you need to enter or change the total amount to be batched or the number of head, enter the new amount and press **SELECT**. Otherwise proceed to next step.

If you attempt to enter a weight amount above the capacity parameter or a head count amount larger than 999, the display will show **CAN'T**. Edit amount, and then press the **SELECT** key.

*Once advancing to the next ingredient it will record the previous Ingredients actual amount loaded into the ingredient accumulators.*

3. Press the **LOAD/UNLOAD** to initiate the loading of the first ingredient. . .

First ingredient description is shown alternating on display with target amount. Example: Corn-1>3000>Corn-1>2800, etc.

At this point the time will be recorded as the time when the ingredient was started to be saved and printed, or transferred to TDM-40, printer or computer.
4. Begin loading the amount displayed. . .

As loading occurs the target weight goes down. Once the target has dropped by more than 25% only the target value will remain displayed. The display will no longer flash back and forth. (This is a programmable parameter under 1040 MENU - NAME)
5. Stop loading the ingredient when you notice that the target weight has been met. . .

Display shows 0.
6. Depending on the system configuration. . .
  - A. Auto advance- User can enter tolerance and ad-delay parameters under the user menu.

If target stays within the tolerance (ING.TOL)setting, and within advance-delay (dELAY) parameter, the system will automatically advance to the next ingredient. If target goes over or under user must use the MENU key to advance forward on the indicator. (AUTO-HOLD DOESN'T FUNCTION IN THIS MODE).
  - B. Manual Advance Method- When amount loaded is close as possible, either press the **MENU** key on the model 1040, (or the XM64 transmitter /receiver if installed), from the front end loader to advance to the next ingredient.If AUTO-HOLD is turned on user will press the key once to get into the hold mode. Now the system can be moved and not affect the target value because of zero shift from moving the mixer. Display will show *HOLD*. Pressing the key again once the system has been moved, will now move to the next ingredient. If this is the last ingredient, the unit will return to Gross weighing mode.

Please remember a hand-add ingredient is a small ingredient that when added will be recorded always as target amount instead of actual amounts.
7. Repeat steps 4-6 until all ingredients are properly loaded.
8. If configured for AUTO-mix, after the last ingredient is loaded, pressing the MENU key or the XM64 will access the mix timer countdown. . .

either ST: XX:XX for self adjusting time  
Or TC: XX:XX for standard timer

After mixer counts down, alarm light comes on, and unit will return to the gross mode after pressing the **MENU**, or **GROSS** key.
9. Now proceed to unload to the appropriate pen. (SEE SECTION ENTITLED PEN UNLOADING)

10. Also if unit is setup for AUTO-PRINT, the following printout will be printed if a printer is installed:

```

10/08/01      Batch 1
Id Number:    123456
Recipe 1:     FR-COW
Load Amount:  10000 lb

Time  Description  Target  Actual
12:01 PM CORN      4000 lb  3900 lb
12:10 PM HAY-1     3000 lb  3030 lb
12:20 PM COTTON    3000 lb  2980 lb
-----
                TOTAL  10000 lb  9910 lb

Time  Pen Name      Target  Actual
12:40 PM PEN-1    5000 lb  5050 lb
12:50 PM PEN-2    5000 lb  4900 lb

```

## Mix Timer Operation

### Time Mix

The Model 1040 has a mix timer feature that can be configured for one of two methods; Time mix or Self Adjust Time.

After a batch is loaded, you can activate a timer, or the Model 1040 can be configured to activate the timer automatically.

Configure this under user's menu-TIMER/TIME. MAX time = 5959, or 59 minutes and 59 seconds. Invalid data entry will be displayed as *CAN'T*. You need to clear the data and re-enter it as a valid time.

1. From the gross mode, enter in timer in minutes/seconds. . .  
*MMSS* is displayed

2. Press the **TIMER** key. . .  
*TC MM:SS* is displayed for three seconds, and then starts counting down. When the end of the timer cycle is reached the red alarm light is lit.

3. Press the **GROSS** key to disable and return to the Gross mode.

#### **To view the current timer setting:**

1. From Gross mode, press **TIMER**. . .  
*TC MM:SS* is displayed (*MM:SS* is the last entered value) for three seconds, then timer starts to count down.
2. Press **GROSS** to return to the gross mode.

## Self Adjust Time

This option requires that a magnetic proximity sensor be installed onto the mixer to provide speed inputs to the Model 1040 every time a full rotation is detected. Overall operation is the same as standard time, but will adjust depending on speed.

The target speed must have been calibrated prior to correct operation.

1. Press the **TIMER** key. . .

*SPD.CAL* is shown while the speed of the mixer is calculated. Then, the new adjusted time is shown; ST:MM:SS and the timer will count down.

The operation from this point is the same as standard Time Mix.

---

## Pen Unloading

---

The Model 1040 can keep track of amounts unloaded to 100 different pens. Make sure all pens have been tagged with customized pen names as described in *Editing Pen Descriptions*, otherwise pen names will have default names, PEN.001, PEN.002, etc.

1. Now with mixer full of a batched amount, and properly mixed, select an unload pen number. . .

Pen number is shown

2. Press the **PEN** key. . .

Pen description is shown.

3. Press the **LOAD/UNLOAD** key. . .

Current unload amount is displayed.

If you need to enter or change the total amount to be unloaded to the pen, enter the new amount and press **SELECT**. Otherwise proceed to next step.

If attempting to enter a weight amount above the overcapacity parameter the display will show *CAN'T*. Edit amount properly and then press the **SELECT** key

4. Press the **LOAD/UNLOAD** to initiate the unloading to the pen. . .  
 The pen description is shown alternating on the display with entered target amount. PEN-01>10000>PEN-01>9000, etc.  
  
 At this point the time needs to be saved in memory, for printing or transfer to the TDM-40 or computer.
5. Begin unloading the amount displayed. As unloading takes place target also goes down. Once the target has dropped by more than 25% only the target value will remain displayed.
6. Stop unloading when the user notices on the display that the proper unload target has been met. . .  
 Display shows 0.
7. Press **MENU** to accept amount unloaded and return to the Gross mode. If a person wants to unload to another pen, then repeat steps 1-7.  
 At this point the actual amount unloaded to a pen is recorded.
8. If system has been set for autoprnt, the following typical prints outs will have been printed as they went through the process.

Press **GROSS** key to abort the loading process.



**Example:  
Loading/Unloading Printout:**


```

10/08/01      Batch 1
Id Number:   123456
Recipe 1:    FR-COW
Load Amount: 10000 lb
Time  Description Target  Actual
12:01 PM CORN      4000 lb  3900 lb
12:10 PM HAY-1     3000 lb  3030 lb
12:20 PM COTTON    3000 lb  2980 lb
-----
                TOTAL  10000 lb  9910 lb

Time  Pen Name   Target  Actual
12:40 PM PEN-1   5000 lb  5050 lb
12:50 PM PEN-2   5000 lb  4900 lb
  
```

## Viewing the Accumulators

The Model 1040 automatically records ingredient, recipe and pen usage when using recipes and pen unload features. The following describes how to view the accumulators on the indicator. Refer to Figure 9.

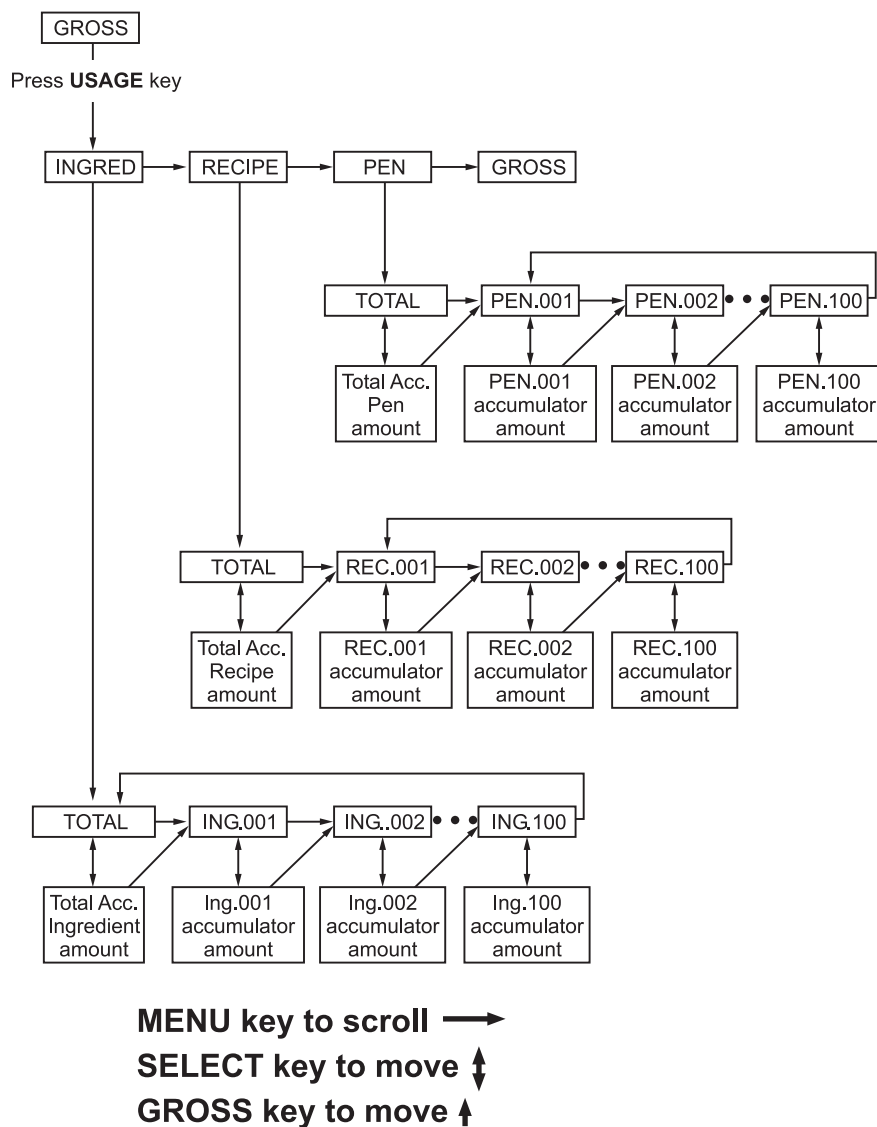

**Figure 9**  
Usage Accumulator

## Viewing the Ingredient Usage Accumulators

To quickly go to specific ingredient accumulator, from *TOTAL*, enter ingredient number and press **SELECT**. The ingredient description is displayed.

1. From the Gross mode, press the **USAGE** key. . .  
*INGRED* is displayed. Refer to Figure 9.
2. Press the **SELECT** key. . .  
*TOTAL* is displayed.
3. Press the **SELECT** key. . .  
The total of all the ingredients is displayed.
4. Press the **SELECT** key . . .  
*TOTAL* is displayed  
  
**OR** press the **MENU** key. . .  
*ING.XXX* is displayed
5. Press the **MENU** key several times until the ingredient to view is displayed. . .  
*ING.XXX* is displayed.
6. Press the **SELECT** key . . .  
*ING XXX* accumulator is displayed.
7. Press the **SELECT** key . . .  
*ING.XXX* is displayed  
  
**OR** press **MENU** key. . .  
*ING.YYY* is displayed
8. Repeat steps 6-7 until done viewing accumulators.
9. Press **GROSS**. . .  
*INGRED* is displayed.
10. Press **GROSS** to return to the gross weighing mode.

## Viewing the Recipe Usage Accumulators

To quickly go to specific recipe accumulator, from *TOTAL*, enter recipe number and press **SELECT**. The recipe description is displayed.

1. From the Gross mode, press the **USAGE** key. . .  
*INGRED* is displayed. Refer to Figure 9.  
  
then press the **MENU** key. . .  
*RECIPE* is displayed.
2. Press the **SELECT** key. . .  
*TOTAL* is displayed.
3. Press the **SELECT** key. . .  
The total of all the recipes is displayed.
4. Press the **SELECT** key . . .  
*TOTAL* is displayed  
  
**OR** press the **MENU** key. . .  
*REC.XXX* is displayed.

## Viewing the Pen Accumulators

*To quickly go to specific pen accumulator, from TOTAL, enter the pen number and press **SELECT**. The pen description is displayed.*

5. Press the **MENU** key several times until the recipe to view is displayed. . .  
*REC.XXX* is displayed.
  6. Press the **SELECT** key . . .  
*REC XXX* accumulator is displayed.
  7. Press the **SELECT** key . . .  
*REC.XXX* is displayed  
  
**OR** press **MENU** key. . .  
*REC.YYY* is displayed
  8. Repeat steps 6-7 until done viewing accumulators.
  9. Press **GROSS**. . .  
*RECIPE* is displayed.
  10. Press **GROSS** to return to the gross weighing mode.
- 
1. From the Gross mode, press the **USAGE** key. . .  
*INGRED* is displayed. Refer to Figure 9.  
  
then press the **MENU** key twice. . .  
*PENS* is displayed.
  2. Press the **SELECT** key. . .  
*TOTAL* is displayed.
  3. Press the **SELECT** key. . .  
The total of all the pens is displayed.
  4. Press the **SELECT** key . . .  
*TOTAL* is displayed  
  
**OR** press the **MENU** key. . .  
*PEN.XXX* is displayed
  5. Press the **MENU** key several times until the pen to view is displayed. . .  
*PEN.XXX* is displayed.
  6. Press the **SELECT** key . . .  
*PEN.XXX* accumulator is displayed.
  7. Press the **SELECT** key . . .  
*PEN.XXX* is displayed  
  
**OR** press **MENU** key. . .  
*PEN.YYY* is displayed
  8. Repeat steps 6-7 until done viewing accumulators.
  9. Press **GROSS**. . .  
*PENS* is displayed.
  10. Press **GROSS** to return to the gross weighing mode.

## The XM64 Transmitter/Receiver

The XM64 transmitter serves a variety of functions depending on the mode the indicator is setup for. The STD configuration parameter sets the transmitter so it acts as follows:

1. If you are doing mixer loading (Load/Unload mode):

If you press and release the clicker, the indicator tares to 0.

If you hold the clicker down for more than a second, gross weight is displayed as long as the clicker button is depressed.

If you hold the clicker button for more than three seconds, the unit remains in the GROSS mode.

2. If the indicator is in recipe or pen mode:

Press the clicker to advance to the next ingredient. If the last ingredient or pen is being displayed, it advances to the Gross mode.

**If unit is set for AUTO-HOLD the XM64 needs to be pressed twice. If not the XM64 only needs to be pressed once.**

## Printing

Press the **PRINT** key from Gross Load/Unload mode to print the displayed weight.



10000 1b

There are nine Quick Prints. These are nine preset print formats. Each is explained below.


To perform a Quick Print key in the desired number (1-9), then press **SELECT**, then **PRINT**.

Printouts fit on a 40 character WP-233 printer.

Using the Quick Prints, you can transfer appropriate data to WP-233 printer, TDM-40 (Transfer Data Module) or a computer.

### QUICK PRINT 1 (Prints active ingredient listing)

*Any ingredient tagged with an (\*) means it is a pre-weighed hand-add ingredient. When used in a recipe, it will be saved in the accumulators as the target value not the actual.*

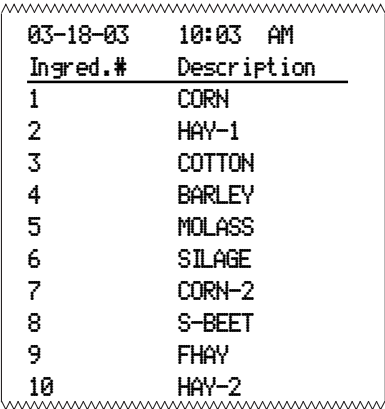

03-18-03	10:03 AM
Ingred.#	Description
1	CORN
2	HAY-1
3	COTTON
4	BARLEY
5	MOLASS
6	SILAGE
7	CORN-2
8	S-BEET
9	FHAY
10	HAY-2

**QUICK PRINT 2**  
 (Prints active unload pen listing, ones that have a target value.)

Pen#	Description
10-18-01	11:50 AM
1.	PEN-1
2.	PEN-2
3.	PEN-3
4.	PEN-4
5.	SMITH
6.	CUST-1
7.	CUST-2

**QUICK PRINT 3:**  
 (Prints all Recipes)

*If recipe was created with Head Count as the entry method, **Load Amount** will be replaced by **Head Count** in the sample at right.*

Ingred.	Description	Target
10-18-01	3:00 PM	
Recipe 1:	FR-COW	
Load Amount:	10000 lb	
1	CORN	4000 lb
2	HAY-1	3000 lb
3	COTTON	3000 lb
Total		10000 lb

**QUICK PRINT 4:**  
 (Prints last 100 batches)

*If recipe was created with Head Count as the entry method, **Load Amount** will be replaced by **Head Count** in the sample at right.*

Time	Description	Target	Actual
10/08/01	Batch 1		
Id Number:	123456		
Recipe 1:	FR-COW		
Load Amount:	10000 lb		
12:01 PM	CORN	4000 lb	3900 lb
12:10 PM	HAY-1	3000 lb	3030 lb
12:20 PM	COTTON	3000 lb	2980 lb
TOTAL		10000 lb	9910 lb
Time	Pen Name	Target	Actual
12:40 PM	PEN-1	5000 lb	5050 lb
12:50 PM	PEN-2	5000 lb	4900 lb

**QUICK PRINT 5**  
 (Prints a listing of all active  
 ingredient accumulators  
 with usage)

10-17-02 6:00 AM		
Ingrid.	Description	Usage
1	CORN	17000 lb
2	HAY-1	6000 lb
3	COTTON	5000 lb
4	BARLEY	4000 lb
5	MOLASS	4000 lb
6	SILAGE	1000 lb
7	CORN-2	20000 lb
8	S-BEET	30000 lb
9	FHAY	40000 lb
10	HAY-2	50000 lb
Total		177000 lb

**QUICK PRINT 6**  
 (Prints a listing of Recipe  
 Accumulators with usage)

10-17-02 6:20 AM		
Recipe	Description	Usage
1	FR-COW	20000 lb
2	H-COW	22000 lb
Total		42000 lb

**QUICK PRINT 7**  
 (Prints a listing of Pen  
 Unloading Accumulators  
 with usage)

10-18-02 11:00 AM		
Pen #	Description	Usage
1	PEN1	20000 lb
2	PEN2	22000 lb
Total		42000 lb

**QUICK PRINT 8**  
**(Prints the Recipe/Ingredient**  
**Accumulators)**

12-07-02 08:07 AM

Recipe 1: REC.001

Ingred.	Description	Usage
30	ING.030	10000 lb
40	ING.040	10000 lb
50	ING.050	10000 lb
60	ING.060	10000 lb
Total		40000 lb

Recipe 2: REC.002

Ingred.	Description	Usage
15	ING.030	10000 lb
20	ING.020	25000 lb
40	ING.040	30000 lb
50	ING.050	15000 lb
Total		80000 lb

**QUICK PRINT 9**  
**(Parameter Printout)**

Ready...

System Configuration Settings  
03-18-03 01:04 PM

User's Menu


Batch Cntr: 0  
Tolerance: 0  
Delay: 0  
Timer: TIME  
Time: 05:00  
Entry: WEIGHT  
Mode: NORMAL  
Time: 01:04 PM  
Date: 03-19-03  
Volume: HIGH  
Sleep: 0  
Nation: ENGLISH

1040 Menu

Firmware Rev: 55422-0012A  
Basic APP Rev: 155799 0A  
Config Number: 10000  
Custom: 0  
O-cap: 2000  
Clock: 12 Hr Format  
Alarm: 50  
Name Flash: ON  
Input: STD Mode  
Input2: STD Mode  
Update: 2  
Average: 30  
FILTER  
Const: 4  
Window 0  
AZT: 0  
Stable: 0  
RS232.1  
Baud: 9600  
Parity: NONE  
Data: 8 bits  
Handshake: NONE  
Layout: STD  
Auto: OFF  
RS323.2  
Baud: 9600  
Parity: NONE  
Data: 8 bits  
Handshake: NONE  
Layout: OFF  
Auto: OFF

# Indicator Diagnostics

The test mode is used to test various functions of the 1040 Indicator. The test menu is shown in Figure 10. Instructions for using the test menu are found below.

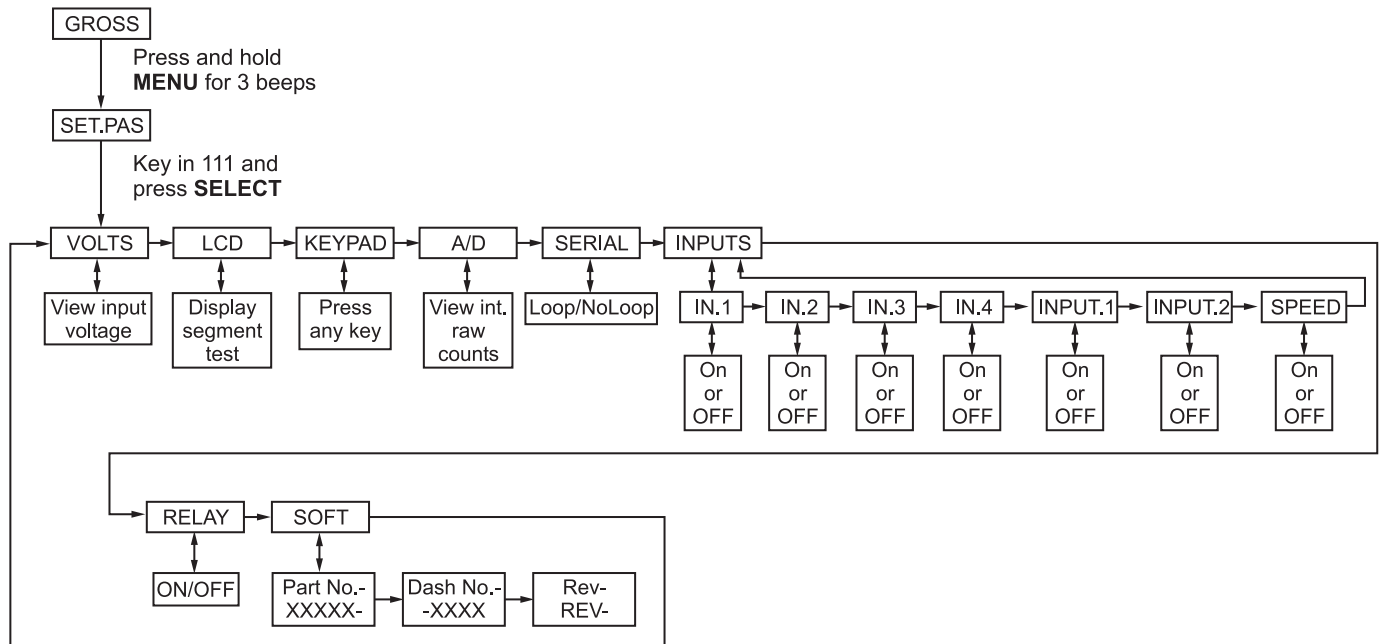

**Figure 10**  
Test Menu (password 111)

You can test the following functions of the indicator with this menu:

VOLTS	Monitor the input voltage of the indicator
LCD	Perform a test of the LCD display
KEYPAD	Perform a key test
A/D	Test the Analog to Digital function
SERIAL	Check serial ports 1 and 2
INPUTS	Check the 7 TTL inputs (INPUT.1 is XM64, SPEED is for Self Adjusting Time mode.
RELAY	Check the alarm relay
SOFT	Verify the software version of the indicator

Use the **MENU** and **SELECT** keys to navigate the menu shown in Figure 10. Step by step instructions appear below.

## Access the Test Menu

1. Press and hold the **MENU** key for 3 beeps (about 3 seconds). Release the key. . .  
*SET.PAS* is displayed.
2. Key in the password, 111, and press the **SELECT** key. . .  
*VOLTS* is displayed.

- |                    |  |
|--------------------|--|
| <b>Volts test</b>  | <p>3. This allows you to check the 12 VDC input voltage the Model 1040 is receiving. With <i>VOLTS</i> displayed, press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;">Current voltage is displayed.</p> <p style="padding-left: 40px;">Press the <b>GROSS</b> key twice to return to gross weighing mode<br/>or<br/>Press <b>SELECT</b> to return to the <i>VOLTS</i> display.</p>   |
| <b>LCD test</b>    | <p>4. From <i>VOLTS</i> display, press the <b>MENU</b> key. . .</p> <p style="padding-left: 40px;"><i>LCD</i> is displayed. Use this to perform a self-test of the LCD display, complete display test or segment test.</p> <p>5. Press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;"><i>TEST</i> is displayed.</p> <p>6. Press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;">Display performs a display test for 15 seconds then <i>TEST</i> is displayed.</p> <p>7. Press the <b>MENU</b> key. . .</p> <p style="padding-left: 40px;"><i>SEGMNT</i> is displayed.</p> <p>8. Press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;">Display performs a segment test for 70 seconds then <i>SEGMNT</i> is displayed.</p> <p>9. Press the <b>GROSS</b> key to return to the <i>LCD</i> display. From here you can Press the <b>GROSS</b> key again to return to gross weighing mode<br/>or<br/>Press <b>MENU</b> to advance to next menu item. . .</p> <p style="padding-left: 40px;"><i>KEYPAD</i> is displayed.</p> |
| <b>Keypad test</b> | <p>10. This allows you to test all the active keys. With <i>KEYPAD</i> displayed, press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;"><i>HIT.KEY</i> is displayed momentarily then <i>NO KEY</i> is displayed. This remains on the screen until a key is pressed. Press any key to see an echo of its name on the display. CAUTION: If you press the <b>MENU</b> key you will exit the test.</p> <p>11. Press the <b>MENU</b> key to stop the test. . .</p> <p style="padding-left: 40px;"><i>KEYPAD</i> is displayed.</p> <p>12. Press the <b>GROSS</b> key to return to gross weighing mode<br/>or<br/>Press <b>MENU</b> to advance to next menu item. . .</p> <p style="padding-left: 40px;"><i>A/D</i> is displayed.</p>   |
| <b>A/D test</b>    | <p>13. Use this to see the actual A/D raw counts value on the display. From <i>A/D</i> display, press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;"><i>CNTS</i> is shown momentarily then the actual A/D raw counts.</p> <p>14. Press the <b>SELECT</b> key. . .</p> <p style="padding-left: 40px;"><i>MV/V</i> is shown momentarily then the actual mV/V reading is shown.</p>  |

**Serial test**

15. Press the **SELECT** key. . .  
*A/D* is shown.
16. Press the **GROSS** key to return to gross weighing mode  
or  
Press **MENU** to advance to next menu item. . .  
*SERIAL* is displayed.
17. Use this to test the serial ports. From *SERIAL* display, press the  
**SELECT** key. . .  
*PORT 1* is displayed.
18. Press the **SELECT** key. . .  
*NOLoop* is displayed.
19. Short the XMT to RCV lines. . .  
*Loop* should be displayed.
20. Press **SELECT**. . .  
*PORT 1* is displayed.
21. Press the **MENU** key. . .  
*PORT 2* is displayed.
22. Repeat steps 18-20. . .  
*PORT 2* is displayed.
23. Press the **GROSS** key to return to gross weighing mode  
or  
Press **MENU** to advance to next menu item. . .  
*INPUTS* is displayed.

**Inputs test**

24. Use this to test the inputs in the 1040. From the *INPUTS* display, press  
the **SELECT** key. . .  
*IN.1* is displayed.
25. Press the **SELECT** key. . .  
*OPEN* or *CLOSED* is displayed.
26. Press the **SELECT** key. . .  
*IN.1* is displayed.
27. Press the **MENU** key. . .  
*IN.2* is displayed.
28. Press the **SELECT** key. . .  
*OPEN* or *CLOSED* is displayed.
29. Press the **SELECT** key. . .  
*IN.2* is displayed.

**Relay test**

30. Repeat steps 27-29 until all inputs are checked.
31. Press the **GROSS** key to return to *INPUTS* and then press **MENU** to advance to next menu item. . .  
*RELAY* is displayed

or

Press the **GROSS** key to return to gross weighing mode.

32. Use this to test the alarm light relay. From *RELAY* display, press the **SELECT** key. . .  
*ON/OFF* is displayed. While this is displayed the alarm light should flash two times per second.

33. Press the **SELECT** key. . .  
*RELAY* is displayed.

34. Press the **GROSS** key to return to gross weighing mode  
or  
Press **MENU** to advance to next menu item. . .

**Soft test**

*SOFT* is displayed.

35. Use this to view software version information for the 1040. From the *SOFT* is display, press the **SELECT** key. . .  
*PART* is displayed.

36. Repeatedly press the **MENU** key to view all the information available. When you have gone through all the displayed information, *SOFT* is displayed.

37. Press the **GROSS** key to return to gross weighing mode  
or  
Press **MENU** to advance to return to the first menu item. . .  
*VOLTS* is displayed.

# RD64/XL/M Remote Displays and XM64 Remote Transmitter

## Remote Displays

The RD64/XL/M are remote displays that are compatible with the Model 1040. See Figure 12. (An RD64 output option is required on the Model 1040 for interfacing.) The interface cable plugs directly into the bottom of the Model 1040. Any data displayed on the Model 1040 is also displayed on the RD64.



RD64XL remote display  
(XM64 optional)



RD64 remote display  
(XM64 optional)



RD64M remote display  
(Mirror mount)

**Figure 12**  
Remote Displays


## XM64 Remote Transmitter/Receiver

An optional radio remote transmitter and receiver (XM64) can be installed in either the RCV-64 or the RD64XL.



This option lets the user tare and manually advance to the next ingredient from a remote location, usually a front-end loader.

<RCV-64 XM64>

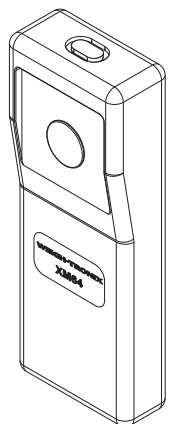

# Troubleshooting

If you experience problems in the operation of your system, read through these troubleshooting steps and perform those which are appropriate. This information may help you to correct the following operational difficulties without calling your supplier or sending your equipment in for repair:

- Power-on
- Indicator Over or Under Capacity
- Inaccurate Weight Readings
- Measuring the Supply Battery Voltage

Instructions for sending an indicator in for repair are provided in the last section under *Service Repairs*.

---

## Power-On

---

If your indicator does not power-on, check the following possible problem sources in the order given. Attempt to power-on after trying each of these four troubleshooting steps:

1. **Check Battery Voltage.** Required voltage is 10-17 volts DC negative ground. If the voltage is between 9-10 volts, the indicator will display *LOW.BAT*. The indicator will automatically turn off if the incoming voltage drops below nine volts or rises above 17 volts.
2. **Disconnect and Check Power Cable Connector** at the vehicle or AC to DC converter, clean if necessary, and reconnect.
3. **Replace Fuse.** Sometimes, a bad fuse can be recognized by an obvious break in the wire filament. However, such a break is not always observable, and getting a successful power-on after changing a fuse is often the only way of knowing that the fuse was indeed defective.

Make sure the new fuse is the proper size and has a current rating of five amperes. Using a fuse with too high a current rating can cause costly damage to the indicator and will void your warranty. The same is true for substituting wire, a nail, or any other object in place of a fuse.

**Place nothing in the fuse connector except a proper fuse.**

Try to power-on after changing the fuse (see instructions below for replacing the fuse).

**To replace the fuse,** remove the 12 front panel screws.

1. Flip front panel out.
2. Locate fuse in lower corner of main PC board.
3. Pull blown fuse out and replace.
4. Re-install and tighten the 12 front panel screws.

4. **Test Indicator and Cables** to isolate the source of the problem.
  - a. Disconnect all cables on bottom panel of Indicator except for power cable. Do not disconnect Weigh Bar<sup>®</sup> cables, and, if present, alarm cable remote display cable, etc.
  - b. Now try powering-on. If this is not successful, your problem is in the indicator and you should contact your supplier.
  - c. If you are able to power-on with only the power cable connected, your problem is probably not in the indicator; continue troubleshooting.

- d. With power still on, plug in cables, one at a time — Weigh Bar<sup>®</sup> cables first, then alarm cable, then printer/remote display cable, etc. — until plugging in one of the cables causes the indicator to shut off. That cable is the bad one and needs to be repaired or replaced.

---

## Indicator Over/Under Capacity

---

An over-ranged indicator is represented by upper dashes or lower dashes.

1. **Test the Weigh Bar<sup>®</sup> cables** to isolate the source of the over-range problem, as follows:
  - a. Disconnect all Weigh Bars<sup>®</sup>.
  - b. Try to zero the indicator by pressing **GROSS** and **CLEAR**.
    - If you are **unable** to zero the indicator with the Weigh Bars<sup>®</sup> disconnected, the problem is in the indicator and you should contact your supplier.
    - If you are **able** to zero your indicator with the Weigh Bars<sup>®</sup> disconnected, then the problem is probably in the Weigh Bars<sup>®</sup> and you should continue troubleshooting.
2. Reconnect all Weigh Bars<sup>®</sup>. You will see upper or lower dashes displayed again.
3. If your Weigh Bar<sup>®</sup> connectors have the four-pin configuration, disconnect one Weigh Bar<sup>®</sup> and connect an adapter plug in its place.

If your Weigh Bar<sup>®</sup> connectors have the five-pin configuration, disconnect one Weigh Bar<sup>®</sup>. No adapter plug is necessary.
4. Try to zero the indicator.

Repeat Steps 4 and 5 with each Weigh Bar<sup>®</sup> cable, making sure each time that all cables are connected except the one you removed (for five-pin connector) or replaced with an adapter plug (for four-pin connector).

A defective Weigh Bar<sup>®</sup> may be easily recognized with this method — **when a defective bar is replaced with an adapter plug** (for four-pin connector), **or removed** (for five-pin connector), **the indicator will zero properly.**

---

## Inaccurate Weight Readings

---

**First: Visually Inspect The Scale System** for apparent problems and improper installation:

1. Check each cable, from source to indicator, for stress, cuts, breaks, or abrasions.
2. Unplug and reconnect each connector at the indicator to verify that it is tight and making good contact.
3. Check the hitch Weigh Bar<sup>®</sup> and verify that mounting bolts are tight and the hitch is not binding.
4. Check between the wheels and frame of the implement for mud and debris that might restrict Weigh Bar<sup>®</sup> movement.
5. Check between supporting structure and weighing structure for debris that might restrict Weigh Bar<sup>®</sup> movement.
6. Make sure the supporting structure and weighing structure do not touch each other at any point except at the Weigh Bars<sup>®</sup>.

**Next: Compare Weight Readings for All Weigh Bars®:**

Position a person or heavy object on the platform above each Weigh Bar®, one bar at a time, and compare weight readings for the same person or same object.

For each weighing, the weight itself will be off-center, favoring a single Weigh Bar®; therefore, none of the readings will be accurate.

However, your readings obtained by weighing the same person or object above each Weigh Bar® should be nearly identical to each other. A single Weigh Bar® reading that is significantly different from the others is probably defective.

---

## Measuring Supply Battery Voltage

---

To check battery voltage:

1. Press and hold **MENU** for three beeps.  
*SET.PAS* is displayed.
2. Enter 111. Press **SELECT**. . .  
*VOLTS* is displayed.
3. Press **SELECT** to display incoming battery voltage.
4. Press **SELECT** to return to *VOLTS* .
5. Press **GROSS** to return to gross weighing mode.

---

## Service Repairs

---

If you find the indicator or one or more of the Weigh Bars® to be defective, contact your supplier, or send your equipment back to the factory for repair, postage prepaid.

Include the following information:

1. Your name and address
2. Supplier name and address
3. Date of purchase
4. **Important:** An informal note describing symptoms of the problem.
5. If possible, the make and model number of equipment the Model 1040 is used on.

If you need contact or additional information, please access [www.agsscales.com](http://www.agsscales.com). If you would like to purchase a service manual, the PN is 29812-0015.

## Windows® Setup

*You must have Microsoft Windows® 95 or 98.*

Use **HYPERTERMINAL**, the communications package in Microsoft Windows 95® to download information from the Model 1040 to the computer.

### Setting up the HYPERTERMINAL icon:

1. Click on the Windows 95 START ICON.
2. Go to Programs, then Accessories, and then click on HyperTerminal
3. Double click on the Hyperterminal ICON, and Execute Hypertrm.exe
4. Enter a name for the connection description EXAMPLE: M1040 and click on the ICON you choose to use for this application.
5. Click on OK and it will ask for Phone Number: On the “connect using” scroll to “Direct to Com 1” and click on OK.
6. Now comes up with COM1 properties, select the following settings:

Bits per second:	9600 (std default baud rate for the Model 1040 or any other baud rate as long as it matches the Model 1040)
Data bits:	8
Parity:	None
Stop bits:	1
Flow control:	Xon/Xoff
7. Click on OK and then select File, and Save.
8. Return to Hyperterminal window

### Setting up Model 1040 Shortcut to COM1:

1. In the Hyperterminal window. right click on the M1040.ht ICON created above.
2. Right click on Shortcut, which will immediately create a shortcut to M1040.ht with the same ICON as before, only with an additional arrow in the ICON.
3. Right click on the new ICON, and then right click on properties.
4. Click on Shortcut, and change “start in” to example c:\winword\dwnd, making sure you have already created this directory in your file manager. Change to where ever you want the shortcut path to store all your M1040.ht shortcut data transfers in that directory to recall the data files later. Then click on OK.

### Creating a download directory (REFERENCE)

1. Double click on Explorer Icon.
2. Assuming we want to create c:\winword\dwnd directory, click on C;WINWORD
3. Click on FILE, NEW, FOLDER.
4. In the name field, type in dwnd, and then click on OK. The directory c:\winword\dwnd has now been created for storing all the download files.

## To Download

1. Take the supplied computer interface cable and plug into COM port (9 pin) on the computer, and the serial port (8 Pin) on the bottom of the Model 1040 indicator. See illustration at left.
2. Within the HyperTerminal window, double click on the new M1040.ht ICON
3. Click on transfer, and then Capture Text and type in the file you want to save the data transfer in (Example May 21.doc), notice the Capture text screen will come up with the Folder name that you specified above when creating the shortcut. In this example the Folder:C:\winword\dwncld will appear.
4. Then click on Start...
5. Using the Model 1040 transfer the appropriate data from the indicator by pressing **PRINT**, or enter 1-9, then press **SELECT**, then **PRINT** to transfer accumulators or batch information to your computer. See earlier sections of this manual on how to transfer appropriate data.
6. Click on File-Save. as your current data transfer will be saved.
7. Click on Call-disconnect, and then return to Hyper-Terminal Windows.
8. Once completed, return to Explorer, and retrieve the saved files, to edit, print, etc.

## Transfer Data Module (TDM-40)

Weigh-Tronix has an optional Transfer Data Module (TDM-40) that has two PC packages available:

- |                    |   |
|--------------------|---|
| A. TDM-40/TDS-40   | Simple collection of batched data.  |
| B. TDM-40/TDS-1040 | Bidirectional interface. Create recipes on computer and input into 1040. Collect batched data on all batches performed. |

Please consult your OEM or Weigh-Tronix distributor for more details on these options.









**Standard Scale & Supply Company**  
**25421 Glendale Avenue**  
**Redford, MI 48239**  
**313-255-6700**  
**[www.standardscale.com](http://www.standardscale.com)**



**Avery Weigh-Tronix**

SCALES FOR AGRIBUSINESS